

ETC Installation Guide

ColorSource® Linear Accessories




Overview

The ColorSource Linear fixture has the following optional accessories:


- Yoke with c-clamp (7414K1017)
- Double yoke with c-clamp for mounting two fixtures (7414K1018)
- Louver (7414K1019)
- Barn doors (7414K1020)
- Secondary lenses (horizontal, vertical, and round)

For information on installing secondary lenses, see the *ColorSource Linear Installation Guide*. All ETC documentation is available for free download at www.etcconnect.com.

**ColorSource Linear
fixture with barn
doors and louver**

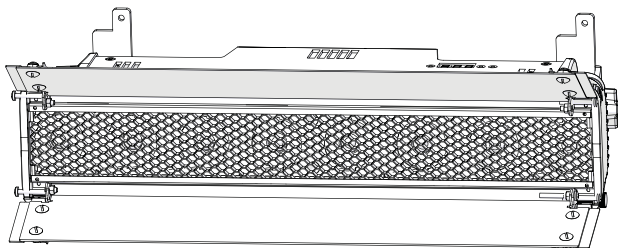

**ColorSource Linear
fixtures with double
yoke**

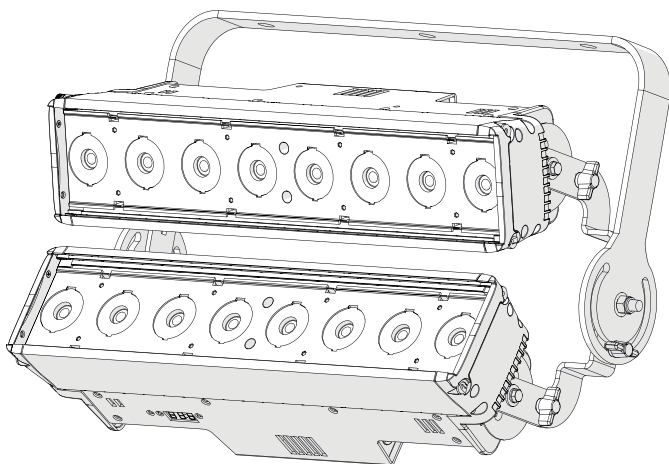

Corporate Headquarters ■ Middleton, Wisconsin, USA ■ Tel +608 831 4116 ■ Service: (Americas) service@etcconnect.com
London, UK ■ Tel +44 (0)20 8896 1000 ■ Service: (UK) service@etcconnect.com
Rome, IT ■ Tel +39 (06) 32 111 683 ■ Service: (UK) service@etcconnect.com
Holzkirchen, DE ■ Tel +49 (80 24) 47 00-0 ■ Service: (DE) techserv-hoki@etcconnect.com
Hong Kong ■ Tel +852 2799 1220 ■ Service: (Asia) service@etcconnect.com
Web: www.etcconnect.com ■ Copyright © 2016 ETC. All Rights Reserved.
Product information and specifications subject to change. ■ ETC intends this document to be provided in its entirety.
7414M2110 ■ Rev A ■ Released 2016-11

ETC Installation Guide

ColorSource Linear Accessories





WARNING:

Disconnect fixtures from power and DMX and allow to cool before performing any modifications such as accessory installation.

Install the yoke or double yoke

You will need a 10 mm wrench to install the yoke or double yoke. If barn doors are installed on the fixture, remove them before installing the yoke or double yoke.

- Step 1: Place the fixture on a flat surface with the LEDs facedown.
- Step 2: Remove the locking knob and bolt from each trunnion. Retain the locking knobs and bolts.
- Step 3: Use the 10 mm wrench to remove the hex head bolts that attach the trunnions to the fixture. Retain the bolts and washers.
- Step 4: After the trunnions are free, remove the trunnions from the fixture.
- Step 5: If you are installing the double yoke, repeat steps 1–4 for the second fixture.
- Step 6: Align the yoke to the fixture (or fixtures). The figure below shows a single yoke.
- Step 7: Install the locking knobs and bolts.
- Step 8: Install the hex head bolts and washers.
- Step 9: Tilt the fixture (or fixtures) to the desired angle and then tighten the locking knobs.

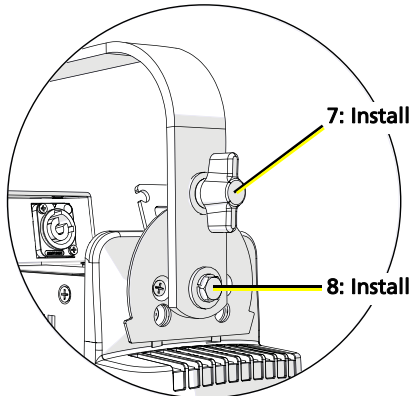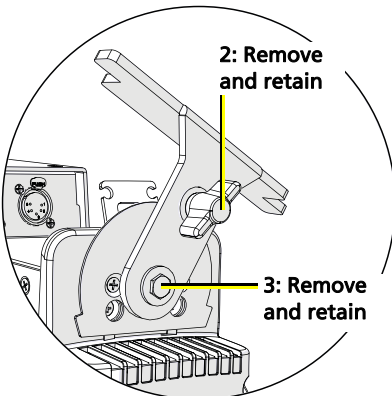


ETC Installation Guide

ColorSource Linear Accessories

Install the louver


- Step 1: Loosen the thumbscrew on the access panel on either end of the fixture.
- Step 2: Pivot the access panel until you can access the slots above the LEDs.
- Step 3: Slide the louver into either of the slots above the LEDs.
- Step 4: Pivot the access panel back into place and tighten the thumb-screw. Make sure that the thumbscrew and pivot-point screw on the access panel are secure.

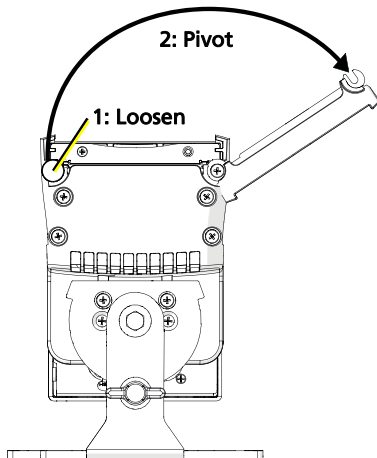

Install the barn doors


Install the barn doors in the top slot (farthest away from the LEDs). You can use the lower slot for a secondary lens or louver, if desired.

- Step 1: Loosen the thumbscrew on the access panel on either end of the fixture.
- Step 2: Pivot the access panel until you can access the slots above the LEDs.
- Step 3: Slide a barn door leaf into the top slot above the LEDs.

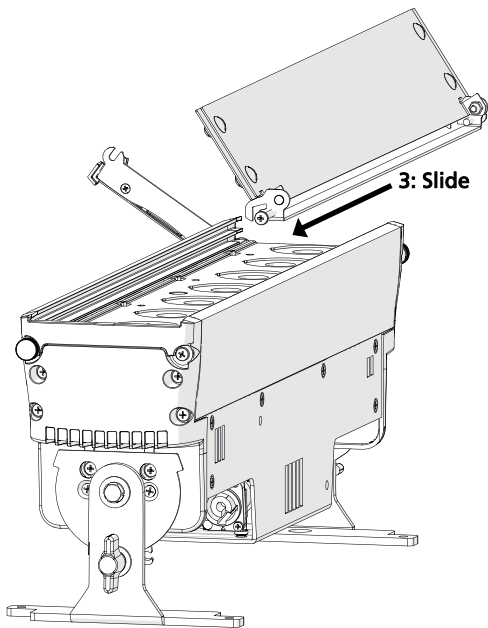

ETC Installation Guide

ColorSource Linear Accessories

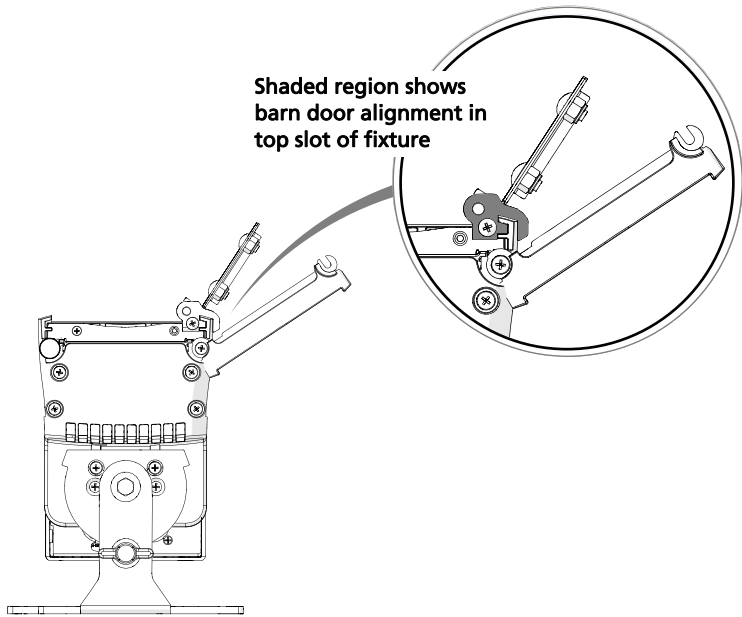

- Step 4: Repeat step 3 for the other barn door leaf.
- Step 5: Pivot the access panel back into place and tighten the thumbscrew. Make sure that the thumbscrew and pivot-point screw on the access panel are secure.
- Step 6: Adjust the leaf angles as needed. If necessary, extend the leaves (as shown below).

