

CUECORE + IOCORE MANUAL



Table of Contents

Introduction.....	3
CueCore.....	3
IoCore.....	3
Further Help.....	4
Setting up.....	5
Mounting.....	5
Power.....	5
Network.....	6
Access via Internet.....	7
vManager Software Tool.....	8
CueluxPro.....	10
Protocols.....	11
DMX-512.....	11
Art-Net.....	11
OSC.....	12
UDP.....	12
GPI.....	12
VisualTouch.....	13
SMPTE.....	13
MIDI.....	13
GPO.....	14
RS-232.....	14
CueCore Web-Interface.....	15
Home.....	15
Console.....	16
Recorder.....	20
Show Control.....	23
Actions.....	25
Monitors.....	30
Settings.....	31
IoCore Web-Interface.....	35
Home.....	35
Show Control.....	36
Monitors.....	38
Settings.....	39

© 2011-2013 Visual Productions BV

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Due to the dynamic nature of product design, the information contained in this document is subject to change without notice. Revisions of this information or new editions may be issued to incorporate such changes.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

Introduction

Thank you for choosing the CueCore and IoCore. This manual discussing setting up the units and programming the lighting cues, show-control-actions and various other features.

The CueCore and IoCore share for a large part the same functionality. When discussing those functions this manual will refer to the 'device'; this means both the CueCore and IoCore.

CueCore

The CueCore is solid-state lighting controller, designed without any moving parts, it is build for reliability and durability.

The unit is aimed at providing a control solution for (semi-)permanent lighting projects. The CueCore primary control signal is DMX-512, the protocol used for entertainment, theatre and most LED lighting fixtures. Next to DMX-512 this controller also supports a range of other protocols; allowing communication with various other equipment.



An internal web-server provides the web-interface through which you can program the CueCore. A modern browser is required to access this web-interface during set-up. A browser or computer is not required for standalone use after the set-up.

It features:

- 2 independent, optically isolated DMX-512 outputs
- optically isolated DMX-512 input
- MIDI in, through and out (with MTC input)
- SMPTE time-code input
- GPI port with 4 contact closures
- Ethernet port with support of Art-Net, OSC & UDP
- Lighting controller with 256 cues
- DMX-512 and Art-Net recorder with 16 memories
- Real-time clock scheduling
- VisualTouch compatibility

IoCore

The IoCore is an expansion module in the CueCore. It offers interfacing to digital and analogue inputs and digital outputs and supports various protocols like DMX, RS-232, OSC, UDP and Art-Net.

The IoCore features 8 inputs that can be individually configured as digital or analogue input. The 8 outputs on the IoCore are relay-switched and can handle 3 Amp. The digital outputs can be used to switched various other devices like A/V equipment, blinds or heavy-duty relays.

Additionally, the IoCore is fitted with a DMX-512 port that can be configured as input or output, and a bi-directional RS-232 port. Through its network port, the IoCore also



supports OSC, UDP and Art-Net protocols that can be used for triggering and conversion.

The compact and versatile IoCore is the ideal expansion for the CueCore in projects that demand more IO. Furthermore, IoCore is equally well suited for standalone IO interfacing or working together with any third-party show control system.

It features:

- 8 inputs, switch-able between digital or analogue
- 8 output, relay-switched
- optically isolated DMX-512 port, switch-able between input or output
- RS-232 port
- Ethernet port with support of Art-Net, OSC & UDP
- VisualTouch compatibility

Further Help

If, after reading this manual, you have further questions then please consult the online forum at <http://forum.visualproductions.nl> for more technical support.

Setting up

This chapter discusses the steps to set up the CueCore and IoCore to start programming.

Mounting

The device can be placed desktop or it can be DIN rail mounted

DIN Rail

The device is prepared for DIN Rail mounting by using the 'DIN rail holder TSH 35' from Bopla (Product no. 22035000).

This adapter is – amongst others – available from:

Farnell / Newark (order code 4189991)

Conrad (order code 539775 – 89)

Distrelec (order code 300060)



Kensington Lock

You can secure your device by using a Kensington style laptop lock.



Power


The CueCore and IoCore require a DC power supply between 9 and 12 Volts with a minimum of 500mA. The 2,1 mm DC is center-positive.



The IoCores are also Power-over-Ethernet (PoE) enabled. The CueCore is POE enabled starting from PCB version 1.6. They require PoE Class I.


Network

During programming a network connection is required between the device and computer. Connect the Ethernet port on the device to the Ethernet port on your computer by using a RJ-45 cable. Alternatively, you can connect the device and the computer via a network switch. The CueCore's Ethernet port is auto-sensing so it does not matter whether you use a cross or straight cable.

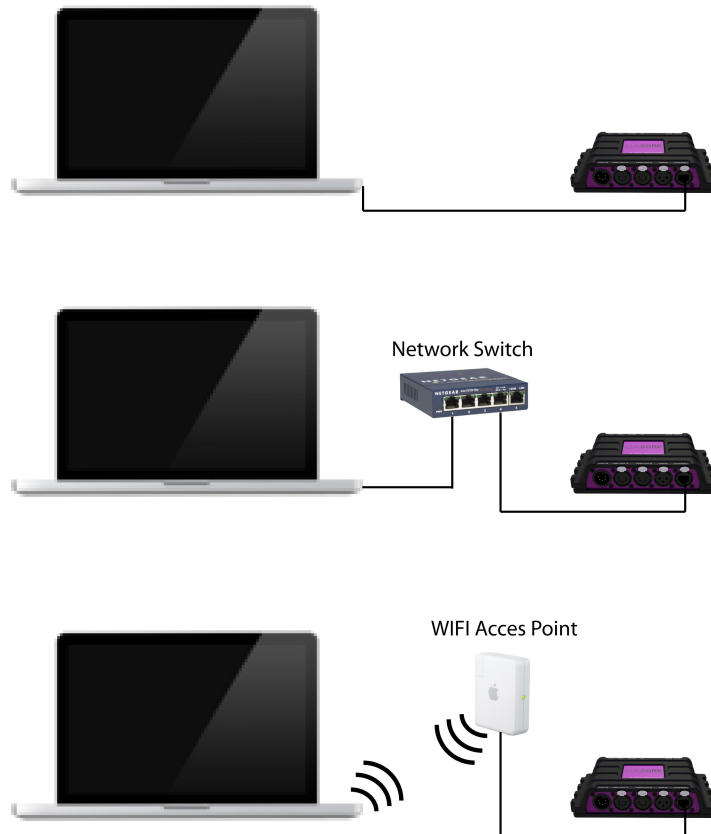


The factory default IP address is 192.168.1.10 with the sub-net mask set to 255.255.255.0. Make sure your computer is in a valid address range, e.g. set your computer to IP 192.168.1.9 with a sub-net mask of 255.255.255.0.

Then open a browser on your computer and go to <http://192.168.1.10>. You should see the following page:

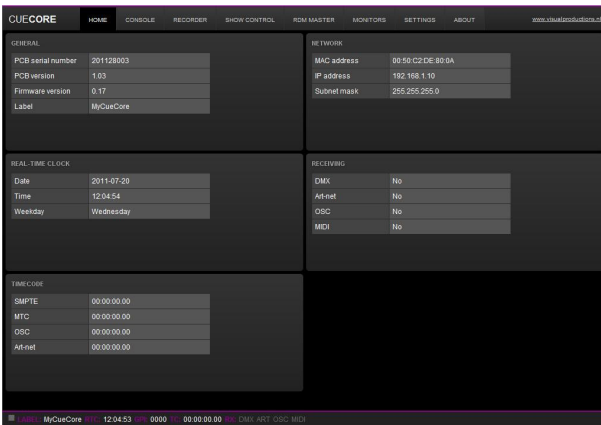

CueCore home page

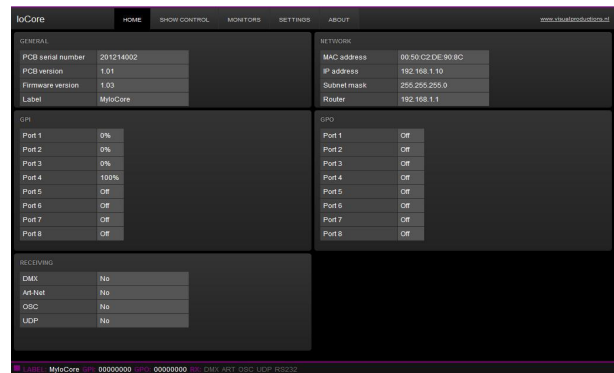

IoCore home page

The settings page allows you to change the IP address and sub-net. Make sure that all equipment on your network have unique IP addresses.

By pressing the reset button on the device for 3 seconds or more, you will reconfigure the unit to the factory default IP address and sub-net mask. No other settings will be changed.



Access via Internet

The Cores are network based and therefore could be accessed via the Internet. There are two ways to achieve this: Port-Forwarding and VPN.


Port-Forwarding is relatively easy to setup in your router. Each router is different so you are advised to consult the router's documentation (sometimes it is referred to as NAT or Port-Redirecting). Please note that port forwarding is not secure, anybody could access your IoCore/CueCore this way.

Accessing via a VPN (Virtual Private Network) tunnel requires a bit more to setup, also your router needs to support the VPN feature. Once setup, this is a very secure way to communicate with your IoCore/CueCore.

vManager Software Tool

A special software tool called vManager has been developed to manage (multiple) devices. This tool is available on MS Windows, Mac OS X and Ubuntu Linux is available via our website, free of charge. vManager allows you to:

- Identify a specific device (in a multi device set-up) by blinking it's LED
- Change IP address and subnet
- Set the CueCore's date and time (your computer's date and time will be used)
- Perform firmware updates
- Do a factory reset that will erase all user data in the device and will restore the default settings.
- Calibrate the CueCore's internal real-time clock
- Make a backup of all the data in the device.

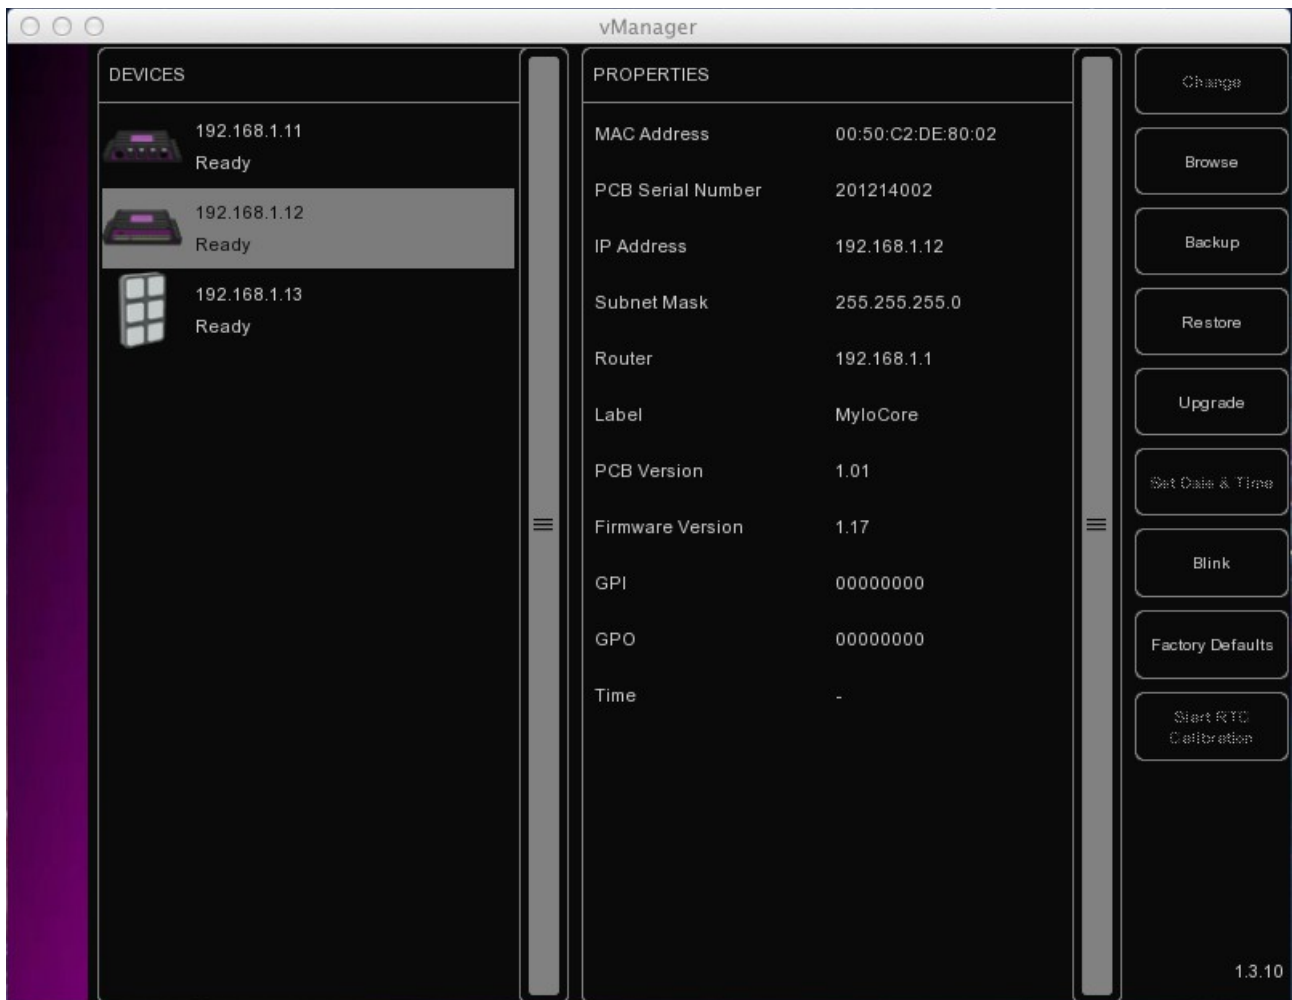

Blink

You can set the device's LED to blink fast for identifying a particular unit amongst multiple devices. The blinking is enabled by double-clicking on a device in the 'Devices' list or by selecting a device and then clicking the 'Blink' button.

Set Date & Time

You can quickly copy your computer's date and time to the CueCore by selecting a device and clicking the 'Set Date & Time' button.

Upgrade Firmware

To upgrade the firmware, first select your device and press the 'Upgrade Firmware' button. The dialogue allows you to select from the firmware available.

Caution: Make sure the power to the device is uninterrupted during the upgrade process.

Factory Defaults

The memory containing all user data like cues, recordings and actions is completely erased and all settings are reverted to their defaults by pressing the 'Factory Defaults' button. This action does not affect the device's IP settings.

RTC Calibration

In case the time in your CueCore's Real-Time Clock (RTC) drifts then you are advised to perform a calibration. Start the calibration process by pressing the 'Start RTC Calibration' button. Then wait a while for the measurement to take place. The longer you wait the more accurate the calculation will be, we recommend somewhere between 30 to 60 minutes. Then press the 'Stop RTC Calibration' button a dialogue will inform you of the results. Press OK to apply the calibration value.

Backup

You can make a backup of all the programming data inside the device. This backup file (an XML) is saved on your computer's hard-disk and can be easily transferred via e-mail or USB stick. You can restore the backup via the 'Restore' button.

The backup files can be found at following location:

Windows XP	C:\Documents and Settings\[username]\My Documents\Visual Productions\Cuety\Backups
Windows Vista	C:\Users\[username]\Documents\Visual Productions\Cuety\Backups
Windows 7	C:\Users\[username]\Documents\Visual Productions\Cuety\Backups
Mac OS X	/Users/[username]/Visual Productions/Cuety\Backups
Ubuntu Linux	/home/[username]/Visual Productions/Cuety\Backups

CueluxPro

The CueCore includes a software licence for CueluxPro. CueluxPro is powerful software application for controlling DMX lighting, it features fixtures, groups, palettes, pixel-mapping, timeline-editor and fx-generator. Each CueCore unlocks 2 universes in CueluxPro, multiple CueCores can be used together to create one large control system. You can also use CueluxPro as a programming-tool for the CueCore, using powerful software features to upload your cues and recorders into the CueCore's memory.

The IoCore is also compatible with CueluxPro. The GPI's can trigger software features and the GPO can be set directly from the application. The IoCore will, however, not unlock a universe in CueluxPro.

For compatibility with CueluxPro the CueCore needs to run firmware **v1.55 or higher**. The IoCore needs to run firmware **v1.16 or higher**.



Please refer to the CueluxPro manual for more information.

Protocols

The CueCore and IoCore are fitted with several communication ports and supports various protocols. This chapter describes these protocols.

DMX-512

The CueCore has two DMX outputs ports and one input. Connect your lighting fixtures either to the DMX OUT A port or DMX OUT B. Use a 5-pin XLR cable to connect the CueCore's DMX OUT port to the first fixture, from then on daisy-chain to all other fixtures.

The IoCore has one DMX port which can be set either as input or as output. The DMX signals are available on the screw terminals. You can create an adapter cable for connecting to XLR connectors using the pin-out below.

3 Pin Adapter

If your cabling or fixtures are using a 3-pin XLR connector then you can obtain - or create yourself - a 5-to-3-pin adapter.

For both 5-pin and 3-pin connectors the pin-out is:

1 = GND

2 = Data-

3 = Data+

(on the 5-pin XLR pin 4 & 5 are not connected)



Cable

Use a shielded twisted pair cable for DMX cabling. The cable should be terminated with a 120 Ohm resistor.

Overcoming DMX-512 Limitations

DMX-512 is a very successful protocol with, however, a few limitations. The maximum number of attached devices is limited to 32 and they all have to be connected in bus-topology having one cable running via each device. Furthermore, a DMX cable should not be longer than 300 meters.

The DIN Rail DMX Splitter from Visual Productions helps tackle those inconvenient limitations of DMX-512. The Splitter takes a DMX signal and sends it out again on its 6 DMX output ports allowing a star-topology for efficient cable usage. Each output port is capable of driving 32 more devices. The Splitter can also function as a signal booster as each port supports another 300 meter long connection.



Art-Net

The Art-Net protocol primarily transfers DMX-512 data over Ethernet. The high bandwidth of an Ethernet connection allows Art-Net to transfer up to 256 universes. The CueCore supports 2 universes outgoing Art-Net and 2 universes incoming.

The broadcast messages sent out by Art-Net do put a certain load on the network, therefore it is recommended to disable Art-Net when not in use.

Additional to transmitting DMX-512 data, Art-Net can also be used for transferring time-code information.

OSC

Open Sound Control (OSC) is a protocol for communicating between computers, software and various multi-media type devices. OSC uses the network to send and receive messages, it can contain MIDI, time-code and custom information.

There are apps available for creating custom-made user interfaces on IOS (iPod, iPhone, iPad) and Android. These tools allow you to program fool-proof user-interfaces for controlling the device. E.g. TouchOSC from <http://hexler.net/software/touchosc>.



There is a TouchOSC layout available from <http://www.visualproductions.nl/products/cuecore.html> that is configured to control the recorder playbacks and select cues in the lighting console of the CueCore. This layout works in conjunction with the 'OSC' templates, as discussed on page 23.

Other templates are available to use the CueCore as a converter between OSC and MIDI.

UDP

UDP (User Datagram Protocol) is a simple protocol for sending message across the network. It is supported by various media devices like video projectors and show controllers.

The device can send and receive UDP messages. The UDP message contains a NULL terminated ASCII string of maximum 15 characters. UDP can be received by adding the UDP source action-list in the Show Control page. Enter the expected ASCII string as the action's trigger. UDP messages can be send by adding a UDP task to any action. Parameter 1 allows you to enter the ASCII string and parameter 2 will contain the destination IP address and port number.

GPI

The General Purpose Inputs (GPI) port on the CueCore differs from the ports on the loCore.


CueCore

The GPI port features 4 contact-closure ports. It allows you to attach physical switches, sensors or other equipment and have the ports trigger events in the CueCore. You can set the port to 'Normally Open' or 'Normally Closed' in the Show Controller (see page 25).

The GPI's RJ-45 has the following pin-out:

Pins 2, 4, 6 & 8 all connected to the same 'ground'.

If your project requires more than 4 GPI contacts then you can expand the GPI ports by connecting one or more loCore modules to your CueCore. The module can be connected through OSC, UDP, Art-Net or DMX.

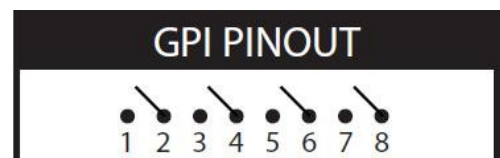


loCore

The loCore features 8 inputs that can be individually configured as digital or analogue input. Set as digital input, it allows for an easy connection with for example physical switches and sensors. When set to analogue, it supports 0-10V and 1-10V inputs; ideal for connecting to household dimmers.

VisualTouch

VisualTouch is a software application that can trigger events within the device. VisualTouch is equipped with a user interface especially designed for use with Touch Screens. This makes it an ideal companion to the device when applied in a fixed installation, using VisualTouch to control recordings and select cues, or any other feature in the CueCore or IoCore.

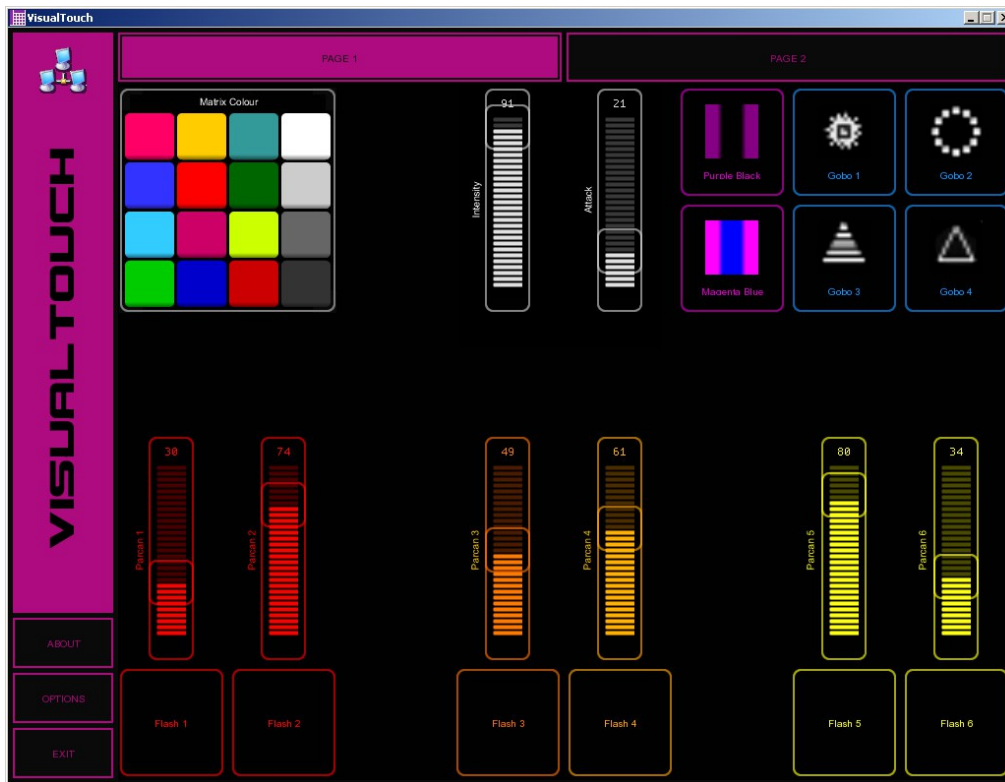

VisualTouch is designed to have no editing capability, making it a fool-proof interface that can safely be presented to non-lighting technicians.

VisualTouch is available on Windows, Mac OS X and Ubuntu Linux and can be downloaded from <http://www.visualproductions.nl/downloads.html>.

SMPT E

- CueCore only -

SMPT E is time-code signal which can be used to synchronize audio, video, lighting and other effects. SMPT E information can be transferred through various media like audio channels, video signals, MIDI, etc.

The CueCore supports receiving LTC SMPT E that is transferred as an audio signal.

MIDI

- CueCore only -

The MIDI protocol was intended for inter-connecting musical devices such as synthesisers and sequencers. This protocol is also very suitable to send triggers from one device to another and is often used to synchronise audio, video and lighting equipment.

There is also a large collection of MIDI control surfaces available; user-interface consoles with knobs, (motor-)faders, rotary-encoders, etc.

The CueCore also supports the time-code signal (MTC) which is embedded into MIDI.



GPO

- IoCore only -

The 8 General Purpose Outputs (GPO) on the IoCore are relay-switched and can handle 3 Amp. The digital outputs can be used to switched various other devices like A/V equipment, blinds or heavy-duty relays.

RS-232

- IoCore only -

The IoCore is fitted with a bi-directional RS-232 communication port. This allows the IoCore to be triggered by ASCII strings received on the RS-232 port and it can send out ASCII strings in response to an event.

CueCore Web-Interface

The CueCore has an inbuilt web-server. All the programming of the CueCore is done via its web-based User-Interface. This 'website' has multiple pages and they are discussed in this chapter.

It is recommend to always use the latest version of your browser. There are many browsers around with many different versions. Compatibility with the web-interface is only guaranteed for the latest versions of Safari, Chrome, Firefox and Internet Explorer.

Home

This is the opening page of the web-interface. It gives a read-only overview of the settings and values; nothing can be changed here.

CueCore [HOME](#) [CONSOLE](#) [RECORDER](#) [SHOW CONTROL](#) [MONITORS](#) [SETTINGS](#) [ABOUT](#) www.visualproductions.nl

GENERAL

PCB serial number	201317095
PCB version	1.05
Firmware version	1.55 Beta
Label	MyCueCore

NETWORK

MAC address	00:50:C2:DE:81:D9
IP address	192.168.1.11
Subnet mask	255.255.255.0
Router	192.168.1.1
Master IP	-

REAL-TIME CLOCK

Date	2013-06-26
Time	09:26:22
Weekday	Wednesday

RECEIVING

DMX	No
Art-Net	No
MIDI	No
OSC	No
UDP	No

TIMECODE

SMPTE	00:00:00.00	-
MTC	00:00:00.00	-
OSC	00:00:00.00	-
Art-Net	00:00:00.00	-


■ LABEL: MyCueCore RTC: 09:26:22 GPI: 0000 TC: 00:00:00.00 RX: DMX ART MIDI OSC UDP MASTER

Notice the status bar at the bottom of the page, this bar offers a real-time display of the CueCore's primary properties. This bar remains visible on each page. The GPI bits indicate 'O' when the contact is open and 'I' when the contact is closed.

The Master field indicates whether the CueCore is connected to the CueluxPro software. Once connected to CueluxPro the CueCore will suspend all standalone operations, instead it will function as interface for the CueluxPro system. All input signals will be forwarded to the software and CueluxPro's data will be outputted on the DMX connectors.

Console

The Console page allows you to program and manually playback lighting scenes.

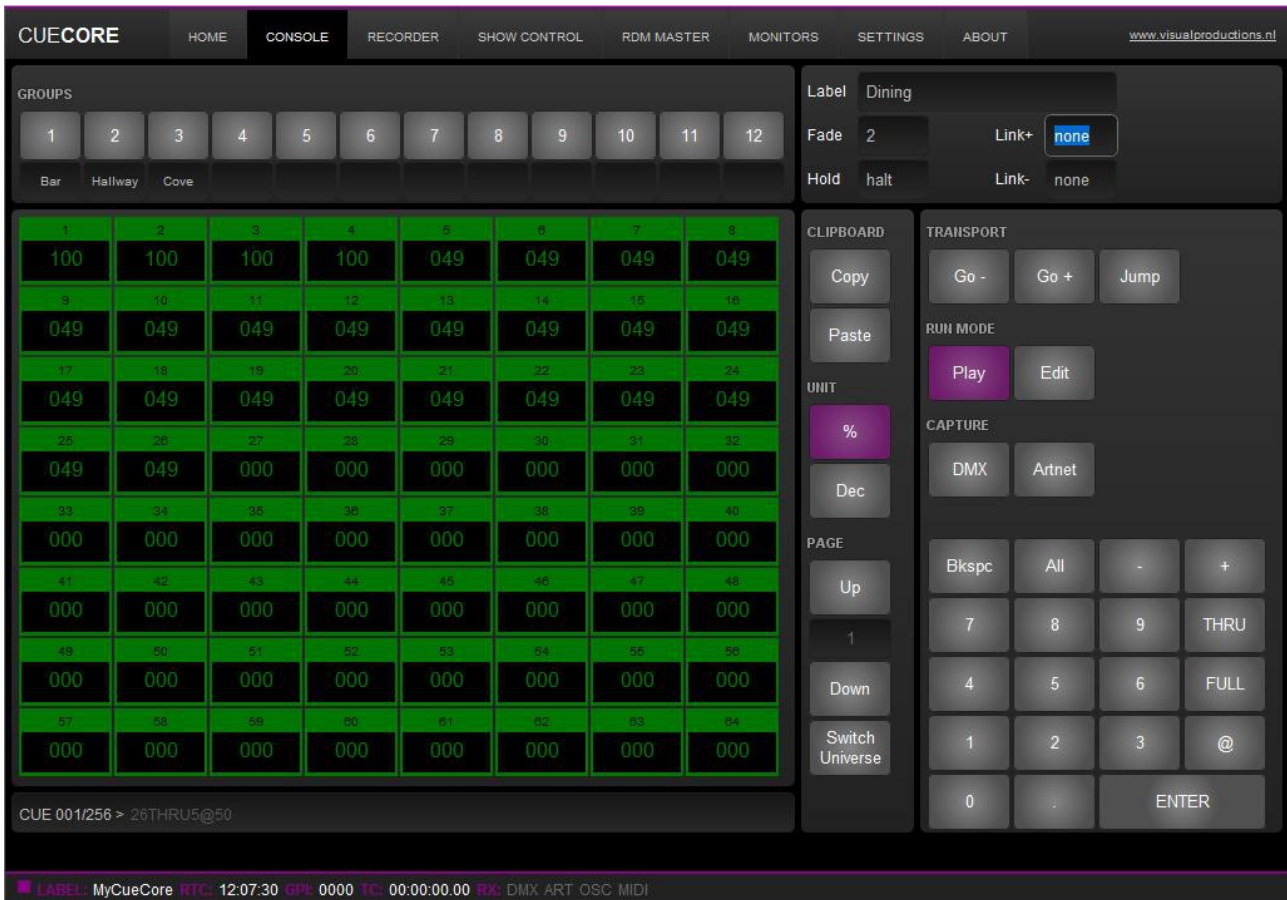

Overview

A Cue is a lighting scene, a state at which all DMX channels are set to a specific value. A sequence of multiple Cues - running one-by-one - is called a Cue-list. The Lighting Console function features a 1 Cue-list containing 256 Cues. Each Cue stores the values for all 1,024 DMX channels. The number of Cues is fixed, however, Cues can be left unused.

Run Mode

The Lighting Console can be set in either PLAY or EDIT mode. The difference between the modes is the EDIT mode ignores the fade, hold and link values. The EDIT mode is more convenient during programming the Cues.

Unit

A DMX channel can be set between 0 (minimum) and 255 (maximum). The DMX levels are shown in these decimal values if the UNIT is set to DEC. When UNIT is set to % the levels are shown in the range of 0% and 100%.

The UNIT setting also influences how you enter the values via the Command Line interface. E.g. if you would like to set a channel to the maximum level you would type in value '255' when the unit is set DEC and you would type in '100' when it was set to %.

Programming a Cue

First enable the EDIT mode and select the desired Cue by using the GO+ and GO- buttons. You see the number of the current Cue in the bottom left-hand corner of the screen.

Use the command line interface (CLI) to change the value of the channel. The CLI is known from theatre lighting consoles and provides a fast way of setting values for one or multiple channels.

Examples of the CLI's usage are:

Command	Function
1 @ 50 <ENTER>	Sets channel 1 at 50% (or at DMX value 50 when DEC unit is selected)
1 + 2 @ <FULL>	Sets channel 1 and 2 at maximum value
1 <THRU> 3 @ 0	Sets channels 1 till 3 at minimum value
1 <THRU> 3 + 5 @ 0	Sets channels 1, 2,3, and 5 at minimum value
<ALL> @ 100 <ENTER>	Sets channels 1 till 1024 at 100% (or at DMX value 100 when DEC unit is selected)
1 @ + 10 <ENTER>	Increases channel 1 value with 10
<ALL> @ - 20 <ENTER>	Decreases all channels' value by 20

Capture a Cue

Alternatively to programming a Cue through the CLI it is also possible to record a Cue from the DMX input port or incoming Art-Net universes.

To capture from DMX, simply connect your external DMX-512 source and set it to output the desired Cue, then press the DMX Capture button. Only the first 512 channels will be recorded, channels 513 till 1024 are left unchanged.


For capturing from Art-Net please make sure that the universe settings for incoming Art-Net match the universes at your Art-Net source. Press the Art-Net Capture button and all 1,024 channels are recorded in the Cue.

Timing

You can specify the cross-fade time between two Cues by setting the Cue's fade time (expressed in seconds). Also you can determine for how long the Cue should be active before advancing to the next Cue by setting the hold time. If the hold time is set to 0, the Cue is set to Halt and will not automatically go to the next Cue.


Linking Cues

When going to a new cue (whether by a manual 'Go+' or automatically by setting a hold time) then by

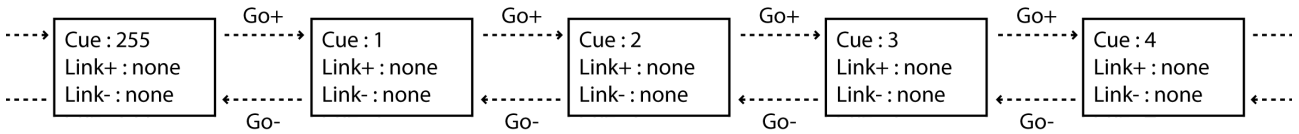


default the next cue will be run, as shown in the next diagram.

You can change this by setting the 'Link+' field other than 'none'. When set to a number, this cue will go to this specified cue number as the next cue. You can use the link field to create loops/chases. See the next diagram.

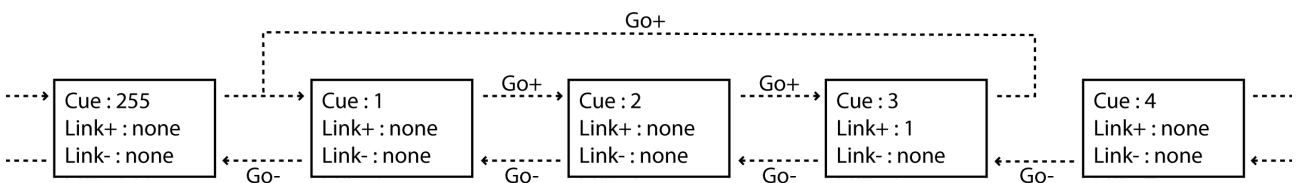

When you press the 'Go-' button you will go to the previous cue, however, similar to the 'Link+' field, you can use the 'Link-' field to specify a cue to go-back to. Using both link fields you can create a bi-directional loop by which the user could step through a set of cues by using just two buttons (e.g. 2 physical switches connected via the GPI port that control the 'Go-' and 'Go+'). As illustrated in the following diagram.

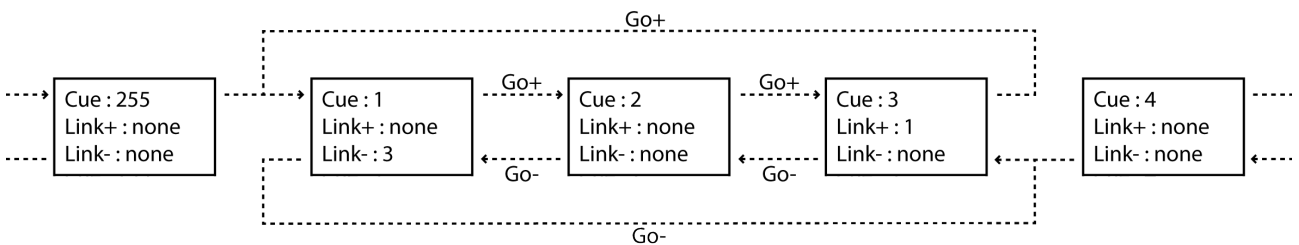

Manual Playback

Set the Lighting Console to the PLAY mode for manual playback of the Cues. You can use the GO+ and GO- buttons for traversing through the various Cues. The JUMP allows you to go to a certain Cue directly (without stepping through all intermediate Cues). E.g. If you like to go to Cue 24 you use the CLI to type <JUMP>24<ENTER>.

Channel Groups

It is likely that during programming of the Cues you will often select the same channels, albeit with different values. To make the process of selecting channels quicker, the Lighting Console features Channel Groups.

You can store one or more channel numbers in a Group and quickly recall this group by clicking its button.

For example you can program the value of channels 1,2,3,4,6 by entering in the CLI:

```
1 <THRU> 4 + 6 @ 50 <ENTER>
```

You can also store these channels in Group 1 by typing:

```
1 <THRU> 4 + 6 @ <GROUP1>
```

Then press the group button to recall Group 1 in order to set the channels:

```
<GROUP1> @50 <ENTER>
```


Routing

The DMX values outputted by the Lighting Console can be routed to either or both DMX-512 outlets and Art-Net. This can be controlled in the settings page (see page 31).





Recorder

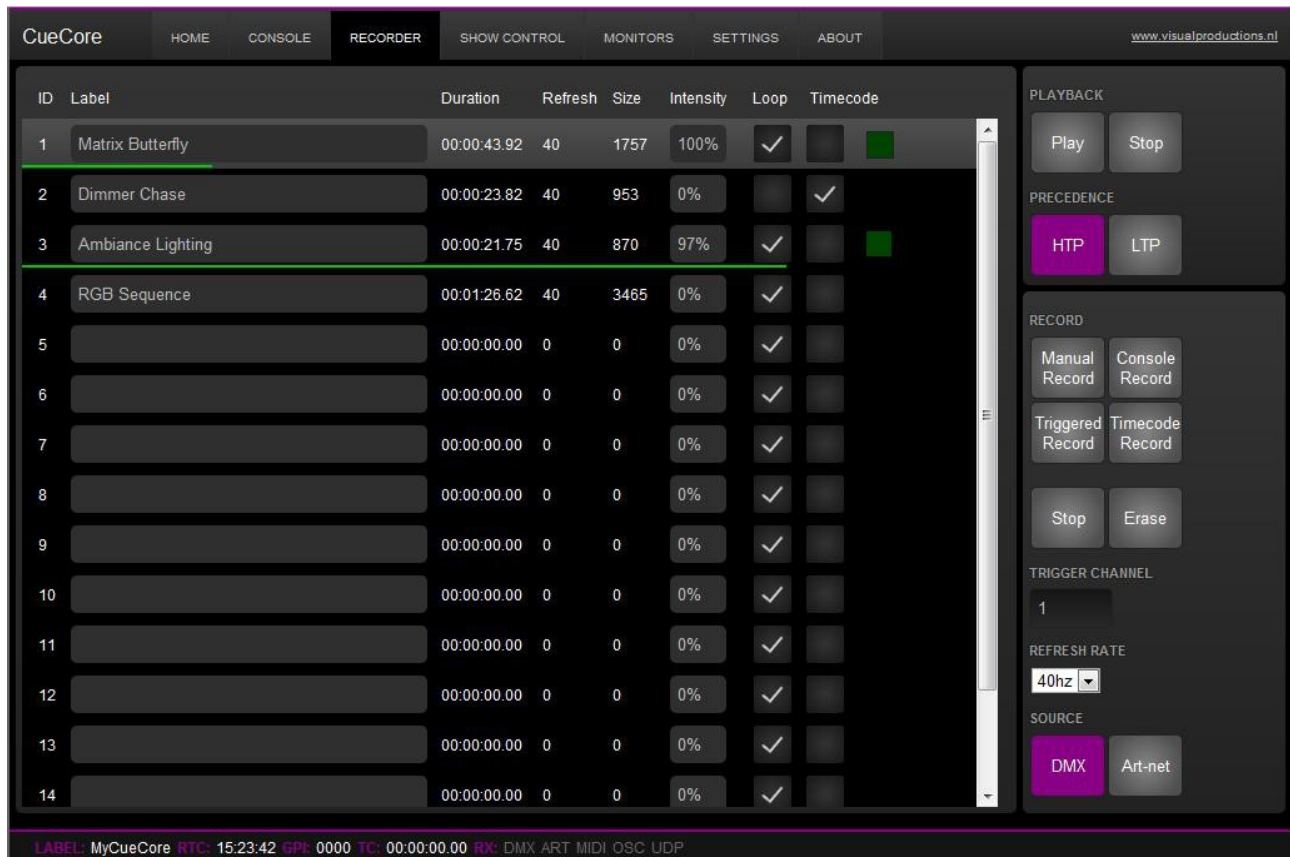In the previous chapter you've read that you can record a static lighting scene by capturing it into a Cue, however, in some cases it will be required to record a dynamic lighting scene that is changing over time. Perhaps you need to record pan/tilt shapes for moving lights or record graphical effects on a LED matrix.

For these situations the CueCore offers the DMX-512 and Art-Net recording functionality. With it you can store both static and dynamic DMX data.



Behind each memory you sometimes see a coloured icon. It represents the state of the memory:

-  Playing
-  Erasing memory (required before a record)
-  Recording
-  Triggered Record (waiting for the trigger channel to go up)

Capacity

There are 16 memories that can hold a recording. When recording all 1,024 channels are stored, even though some channels might not be used and remain at zero. The CueCore utilizes a compression technique to filter out all channels that do not change. Therefore it is not possible to exactly state the maximum duration a memory can hold; it depends on the DMX data itself. When many channels change often the compression is less effective. When only a few channel change a little the compression is very effective.

Furthermore, the refresh rate setting will determine how many samples of the data are taken per second and stored in memory. This setting varies between 1 and 40 frames per second. 40 Hz gives maximum quality in terms of smooth dimming curves. 5 Hz is quite a low value but very useful for

recording very slow DMX changes that in themselves might not change faster anyway. Often a setting of 20 Hz will do fine, while allowing for twice as long recording as a 40 Hz setting.

Theoretically, the memory will hold for at least XXX seconds data in the worst-case situation, i.e. all 1,024 channels change each frame, recorded at 40 Hz. More realistic, a set-up using 100 dimmer channels changing regularly, recorded at 30 Hz, may last XXXXX minutes.

By default, the recorder has 16 memories. You can reduce the number of memories in the settings page. When you reduce the number of memories each memory will have more storing capacity, as the total capacity used by all memories remains the same.

Recording

To make a recording first select one of the memories. You may give it a name now or do this after recording. Then set the desired refresh rate and select between DMX and Art-Net for the source. Then press the MANUAL RECORD button. When you're ready press the STOP button. If the memory becomes full the recording is stopped automatically.

You can use the CONSOLE RECORD button to simply copy the current output of the Console into a recording (this recording will have one DMX frame).

Alternatively, you can have the recording started and stopped automatically if the timing needs to be more precise than manual control. In order to make a 'triggered' recording appoint one DMX channel as the trigger channel (choose from 1 till 1,024). Then press the TRIGGERED RECORD button. The memory is now ready for recording, but the recording will only start when the trigger channel's value reaches above 127. The recording is stopped as soon as the trigger channel goes below or equals 127. This allows you to program the value of the trigger channel in your external DMX-512 or Art-Net console and time the recording accurately.

Finally, you can also record a memory in sync with the time-code by using the TIME-CODE RECORD button.

Playback

Each memory has an intensity value. When the intensity is set to a value other than 0, the memory will be played back. The CueCore is capable of simultaneous playback of 4 memories. When a fifth playback is set to playback, CueCore will automatically stop the oldest playback (the one whose intensity level has not altered for the longest time).

HTP/LTP

By default the values of all running playbacks are, with its intensity level taken into account, merged together according to the Highest Takes Precedence (HTP) principle. The following table illustrates the HTP system.

	Playback 1	Playback 2	Playback 3	Merged Output
Channel 1	0%	0%	25%	25%
Channel 2	100%	0%	25%	100%
Channel 3	0%	0%	0%	0%
Channel 4	0%	100%	25%	100%

When set to LTP, only the last activated playback will send out its values. As soon as that playback is stopped the one-but-last activated playback will be sending out.

Time-code

Normally the memory is played back using the internal timings of the CueCore. When the 'Time-code' check box is enabled, the internal timing is ignored and the playback is synchronised to the time-code. Please select a time-code source in the settings page.

Loop

The 'Loop' check box controls whether the playback stops when it reaches the end of the track, or whether it should continue looping indefinitely. The Loop feature is only available when 'Time-code' is disabled.

Routing

The DMX values outputted by the Recorder can be routed to either or both DMX-512 outlets and Art-Net. This can be controlled in the settings page (see page 31).

Show Control

Your CueCore needs to respond to the outside world. With today's ever more demanding lighting projects, chances are it needs to respond to various different signals or protocols. The CueCore supports a variety of protocols. In the Show Control page you determine how your CueCore will respond to which signal and what tasks it will perform when triggered.

The screenshot displays the 'SHOW CONTROL' page of the CueCore software. The interface is organized into several panels:

- SOURCES:** A list of input sources including Touch Screen, Art-Net, Dmx Input, Timecode, System, OSC, Variable, and Track. An 'Add >>' button is located at the bottom.
- TEMPLATES:** A list of pre-defined configurations such as Art-Net -> DMX, DMX -> Art-Net, DMX -> MIDI, GPI -> DMX, GPI -> MIDI, GPI -> OSC, and GPI -> Art-Net. An 'Add >>' button is at the bottom.
- ACTION LISTS:** A table with columns for the source and an 'ENABLED' checkbox. The listed items are GPI, Scheduler, and MIDI, all of which are checked. A 'Remove' button is at the bottom.
- ACTIONS:** A list of actions including Sunrise, Sunset, Monday Morning, Other Mornings, Evening, Friday Evening, Christmas Start, and Christmas End. 'Up' and 'Down' buttons are on the right side. At the bottom are buttons for 'Edit', 'Execute', 'Rename', and 'Remove'.
- ACTION TYPES:** A panel with an 'Action' header and a '<< Add' button.

At the top, a navigation bar includes 'CUECORE', 'HOME', 'CONSOLE', 'RECORDER', 'SHOW CONTROL' (active), 'RDM MASTER', 'MONITORS', 'SETTINGS', and 'ABOUT'. The URL 'www.visualproductions.nl' is visible in the top right. A status bar at the bottom shows: '■ LABEL: MyCueCore RTT: 12:16:26 GPI: 0000 TC: 00:00:00.00 RX: DMX ART OSC MIDI'.

The show control consists of action-lists and actions. All the different kind of signals the CueCore can receive are categorized as 'sources'. Each action-list relates to one source and can contain multiple actions. Each action details to which specific signal it is listening and contains a list of tasks it will perform when triggered. Action-lists and actions are further discussed on page 24.

Protocol Conversion

With many signals coming into the CueCore and many signal going out, the Show Control page is also the place where you can program Conversion between different protocols. For example you can program an Art-Net Source and fit it within an Action that sends out DMX-512, thus creating an Art-Net to DMX-512 converter.

Templates

The Show Control page provides ready-made Templates for several typical action arrangements. Templates can be easily copied to the Source list and modified in necessary.

The following table describes the functionality of the templates.

Art-Net → DMX	Converts Art-Net input universe 1 to DMX Out A and Art-Net input universe 2 to DMX Out B.
DMX → Art-Net	Converts DMX input to Art-Net output universe 1.
DMX → Recorder	DMX input channel 1-16 control the playback of Recorder 1-16.
DMX → MIDI	Converts DMX input to MIDI output. DMX channels 1-128 are converted to CC messages on MIDI channel 1. DMX channels 129-256 are converted to CC messages on MIDI channel 2. DMX channels 257-384 are converted to CC messages on MIDI channel 3. DMX channels 385-512 are converted to CC messages on MIDI channel 4.
GPI → DMX	GPI port 1-4 is converted to DMX channel 1-4 on DMX Out A.
GPI → Recorder	GPI port 1-4 controls the playback of Recorder 1-4.
GPI → MIDI	GPI port 1-4 is converted to Note On 1-4 messages on MIDI channel 1.
GPI → OSC	GPI port 1-4 is converted to OSC “/gpiX” messages.
GPI → Art-Net	GPI port 1-4 is converted to DMX channel 1-4 on Art-Net output universe 1.
MIDI → DMX	Converts incoming MIDI to DMX channels.
MIDI → Art-Net	Converts incoming MIDI to Art-Net channels.
Art-Net → Recorder	Maps the first 16 channels of the 'In A' universe to the playback intensities of the recorder's memories.
Touch Screen → Recorder	Touch Screen layout with faders to control the playback intensities of the recorder's memories.
GPI → Console	Triggering GPI port 1-4 will jump to the corresponding cue in the Console.
OSC RGBW Example	OSC actions to match the TouchOSC template that can be downloaded from our website. This example assumes a RGBW fixture is connected with starting address 1.
OSC → Recorder	Controls the playback intensities of the recorder's memories by incoming OSC messages. The OSC URI is /trackX, where X is the memory number.
DMX Splitter	The DMX signal from DMX Input is sent out on DMX Outputs A and B.
Production Test	This template is used for testing the device during the production process.

VisualTouch

Creating a VisualTouch layout is done by creating a 'Touch Screen' action-list and adding actions. For each action you can choose between various controls like buttons and sliders. The order of the actions will control the arrangement in VisualTouch.

Actions

Programming the show controller involves adding action-list and specifying actions.

Action-lists

In the Action-lists table you can include the sources you will be using in your project. You can choose from input sources like: DMX, Art-Net, MIDI, GPI, Time-code, Scheduler & OSC. Each source may exist in the table only once, with a maximum of 8 sources in total. Each Action-list can be enabled and disabled.

The available sources are:


Touch Screen	Triggers from the VisualTouch software tool.
Art-Net	Trigger on reception of Art-Net or convert Art-Net universes to DMX.
DMX In	Convert to complete universe to Art-Net or trigger by individual DMX channels. Only 50 channels are monitored for individual triggering, starting -by default- at channel 1. You can change this starting channel in the settings page.
MIDI	Trigger by or convert from incoming MIDI messages like Notes, Control Changes or Program Changes.
Timecode *	Trigger by exact timecode frames. You specify the timecode protocol in the settings page.
Scheduler *	The inbuilt RTC allows triggering on time, day, weekday and sunrise/sunset.
System	Miscellaneous triggers like 'OnStartup'
OSC	Incoming OSC messages
GPI	State changes on the onboard GPI port.
Variable	Changes of the variable values.
Recorder *	State changes of the recordings like 'OnEnd'
Console *	State changes of the console.
Randomizer	The Randomizer can randomly trigger actions.
User List	An actionlist without any source, can be used to 'link to'.

* Indicates a source only available on the CueCore.

Actions

Within each Action-list you can create multiple Actions. You can create up to 64 Actions system-wide and maximum 48 per list. For each Action you specify when it will be triggered and which Tasks it will perform when that trigger occurs.

To change the details of an action, select it and press the EDIT button. This will open the Action page.

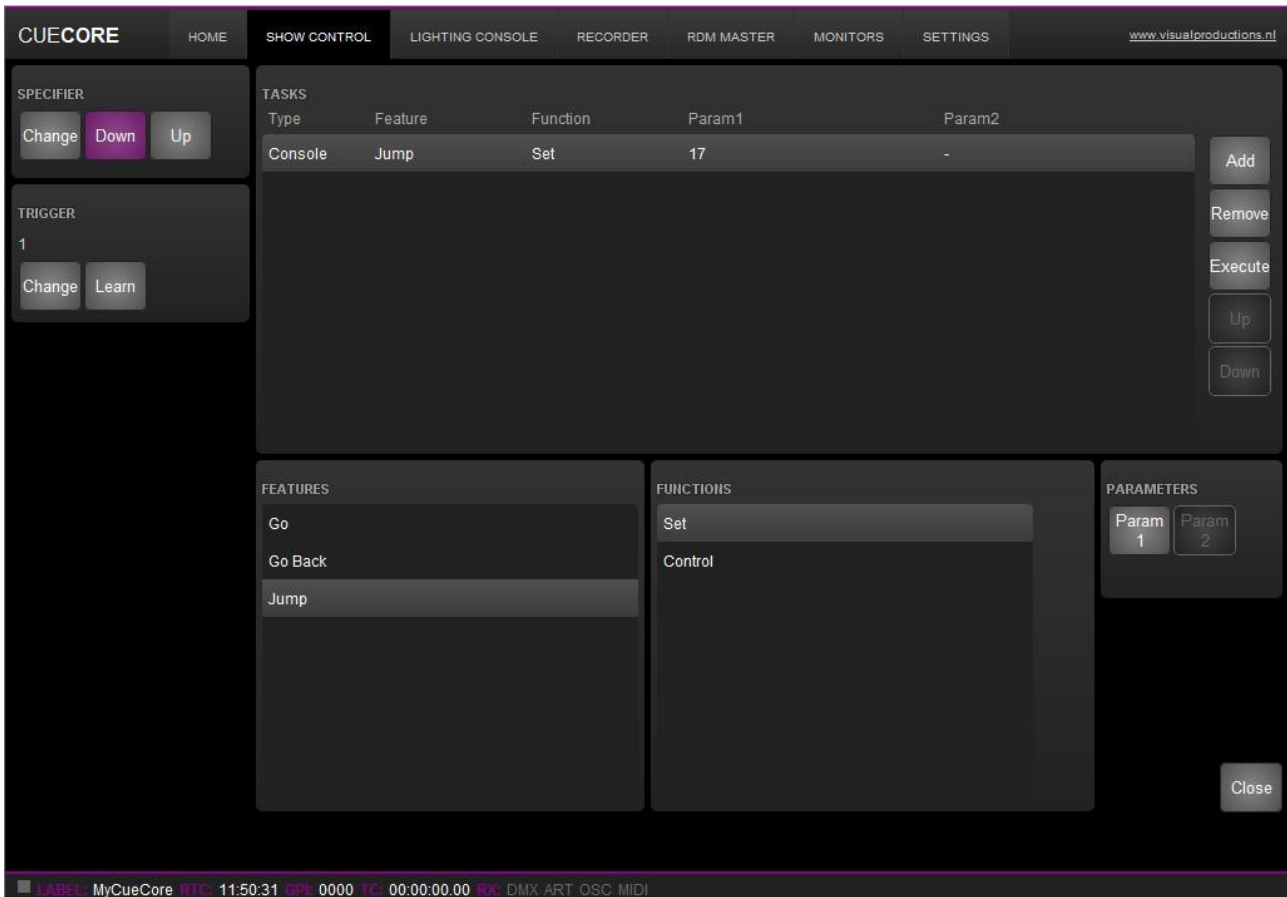

Flank

For most types of actions you can set the flank. For example when editing a GPI action, it will be triggered only on closing the contact (also known as 'normally open') when the specifier is set to DOWN. When set to UP, the action will be only trigger on opening the contact (a.k.a. 'normally closed'). Finally, when the specifier is set to CHANGE, the action will be triggered on both closing and opening of the contact.

Trigger

Specify the exact trigger on which to execute the tasks. In the case of a GPI action, the trigger denotes the trigger port number (there are 4 ports on the CueCore).

Tasks

You can specify up to 8 Tasks per Action and a maximum 128 Tasks in total. When triggered, the Tasks are performed in the same order as they are listed in the Action. Tasks can control various elements and protocols in the CueCore, such as DMX, MIDI, Art-Net, OSC, Lighting Console's Cues, playback of recordings. Tasks can also be used to trigger other Actions, enable or disable action-lists and start/stop the internal time-code.

Because a Task can do a wide variety of things they are organized in different Task 'Types'. When adding a task a pop-up window will allow you to choose from the following types:

Console	Control Cues and other elements found on the Console page.
Recorder	Control playback of Recording's and other elements found on the Recorder page.
DMX	Control the DMX channels in the 'Show Control buffer'. This data can be send out via the DMX ports and/or Art-Net. Please set the 'Output Routing' in the Settings page accordingly.
MIDI	Send a MIDI message.
OSC	Send an OSC message.
Art-Net	[obsolete, use DMX in stead]
System	Perform miscellaneous tasks like blinking the device's LED.
Action	Trigger another action.
Action List	Control the properties of an Action-list (e.g. Enable check-box).
Timecode	Control the time-code properties like selecting the input source or start/stop the internal time-code generator.
Variable	[not implemented yet]
UDP	Send a UDP message.
GPI	Trigger the GPI port to read a binary value across all 4 contacts.
Randomizer	Trigger the Randomizer to calculate a new value.

Feature

For each task you can select a Feature. The choice in Features differs for each Type.

Console features:

Go+	Jump to the next Cue. I f the current cue is number 256 then it will jump to cue 1.
Go-	Jump to the previous Cue. I f the current cue is number 1 then it will jump to cue 256.
Jump	Jump to a specific Cue number.
Intensity	Set the Console's master intensity.
Capture from DMX	Record the channel values from the DMX in port and save it in the current Cue. Because there is only one DMX input this will only save the first 512 channels.
Capture from Art-Net	Record the channel values from the Art-Net in universes and save it in the current Cue.
Capture from Show Control	Record the channel values from the 'Show Control DMX buffer' and save it in the current Cue.

Recorder features:

Intensity	Set the playback intensity of a memory.
Playstate	Start, stop or toggle the playback of a memory
Solo	Start the playback of a memory and stop all others
Random Solo	Randomly pick a memory to Start and stop all others. Empty memories will be ignored.
Stop All	Stop the playback of all memories.
Loop	Change the loop checkbox of a memory.
Timecode	Change the timecode checkbox of a memory.
Record	Record a memory.

DMX features:

Set Value	Set a channel
Bump Channel	Momentary set a channel to certain value
Clear All	Set all channels to zero
Spectrum	Scroll through the RGB spectrum. Parameter 1 designates the starting address of the RGB fixture.
Refresh	Explicitly trigger all action in the DMX In source.

MIDI features:

Send	Send a MIDI message.
------	----------------------

OSC features:

Send	Send a message with a float type parameter (legacy).
Send Float	Send a message with a float type parameter (preferred).
Send Unsigned	Send a message with a unsigned type parameter.
Send Bool	Send a message with a bool type parameter.
Send String	Send a message with a string type parameter.

Function

Each Task also has a Function field. The choice of Functions depends on the Task-Type and the selected Feature. For example, when you add a Task with the 'Console' Type and set its Feature to 'Jump' then you can select of the following Functions:

Set	Jump to a Cue number specified in Param1.
Toggle	Jump to between the Cue numbers specified in Param1 and Param2.
Control	Jump to a Cue number determined by the trigger of this action. If this action was triggered by a MIDI messages then the Cue number is determined by the MIDI value (in case of a CC message) or velocity (in case of a NoteOn message).
Switch	Switch to between the Cue numbers specified in Param1 and Param2. If the action was triggered by a value <50% it will select Param1 and if it's >50% it will select Param2.


Scheduling

An important input Source is the Scheduler. The Scheduler uses the CueCore's internal, battery backed-

up Real-Time Clock. There are several ways to specify a trigger.

Date and Time

You can use the Scheduler to trigger actions on certain dates and times. When specifying a date and time it is possible to choose 'Don't Care' for each value by entering 'X'. E.g. if you set a date and specify 'Don't Care' for the year field, this Action will be triggered each year.

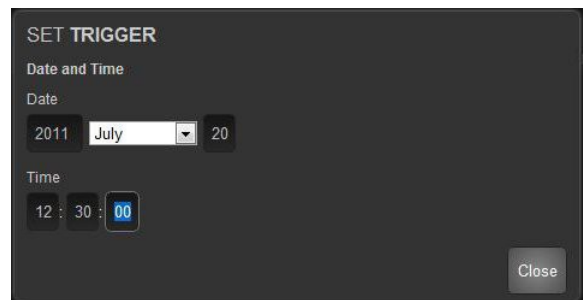


Weekday and Time

Sometimes you would like to define a trigger based on a day in the week, rather than a specific date. The CueCore supports this, it allows to choose any combination of weekdays and time.

Astronomical Clock

The CueCore is equipped with an astronomical clock that based on the day of the year and position on the globe (as configured in the settings page) calculates the sunrise and sunset times. This allows you to trigger events on sunrise or sunset.

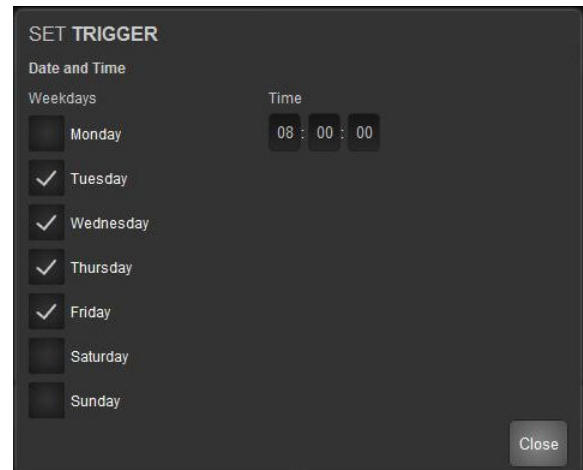

Monitors

The Monitor page presents you with an overview of the CueCore's incoming and outgoing data. This page is useful for checking and debugging your programming.

The top row of buttons allows for selecting the data stream. In the case of DMX or Art-Net data, you can use the buttons on the right to toggle between decimal and percentage notations, and use the up and down buttons to step through all the channel pages.

The screenshot displays the CueCore Monitors interface. At the top, there is a navigation bar with the following tabs: CUECORE, HOME, CONSOLE, RECORDER, SHOW CONTROL, RDM MASTER, MONITORS (selected), SETTINGS, and ABOUT. The URL www.visualproductions.nl is visible in the top right corner.

Below the navigation bar is a row of buttons for selecting the data stream: DMX In (selected), DMX Out A, DMX Out B, Art-net In A, Art-net In B, Art-net Out A, Art-net Out B, MIDI In, MIDI Out, OSC In, and OSC Out.

The main area is a grid of 80 channels (8 columns by 10 rows). The first row shows values: 029, 038, 042, 049, 070, 080, 000, 000. All other channels in the grid show 000. The grid is highlighted with a green border.

On the right side of the grid, there are control buttons: UNIT (with a % button selected), Dec, PAGE (with Up and Down buttons), and a page number 1.

At the bottom of the interface, there is a status bar with the following information: LABEL: MyCueCore, RTC: 12:34:36, GPI: 0000, TC: 00:00:00.00, RX: DMX ART OSC MIDI.

Settings

In the Settings page you can change various properties of the CueCore.

The screenshot displays the CueCore Settings interface, which is organized into several panels:

- GENERAL:** Label (MyCueCore), Memories (16), Blink (checkbox).
- OUTPUT ROUTING:** DMX and Art-Net columns with checkboxes for Console, Recorder, Show Control, and Duplicate A on B.
- ART-NET:** universe and sub.uni columns with settings for In A, In B, Out A, and Out B.
- DATE & TIME:** Date (2013-06-26), Time (09:23:19), Weekday (Wednesday), Daylight Saving Time (None).
- LOCATION:** Latitude (52.2 degrees), Longitude (4.5 degrees), UTC (+1), Sunrise (04:22), Sunset (21:07), and their respective offsets.
- DMX INPUT:** Address (input field), UDP In port (7000).
- TIMECODE:** Input source (SMPTE), Output FPS (30 fps), Output routing (MTC, OSC, Art-Net).
- OSC:** In port (8000), Out IP 1 (192.168.1.40:8000), Out IP 2 (0.0.0.0), Out IP 3 (0.0.0.0), Out IP 4 (0.0.0.0).
- IP:** IP address (192.168.1.11), Subnet mask (255.255.255.0), Router (192.168.1.1).

At the bottom, a status bar displays: LABEL: MyCueCore RTC: 09:23:18 GPI: 0000 TC: 00:00:00.00 RX: DMX ART MIDI OSC UDP MASTER

General

You can change the CueCore's label. This label can be used to distinguish the unit in a set-up with multiple CueCores.

The 'Blink' check-box will flash the device's LED to help to identify it amongst multiple devices.


This section also allows you to set the number of Memories in the Recorder. By default this number is set to 16. If you would like to store only a few, but larger, recordings then you can lower this number; making each memory bigger. All the recorder's memories need to be erased after changing this setting.

Output Routing

There are three sources that can set DMX/Art-Net data:

- Lighting Console
- Recorder
- Show Control

The routing settings enables you to determine on which ports the Lighting Console, Recorder and Show Control output their data; i.e. the DMX ports, the Art-Net (Ethernet) port or both.

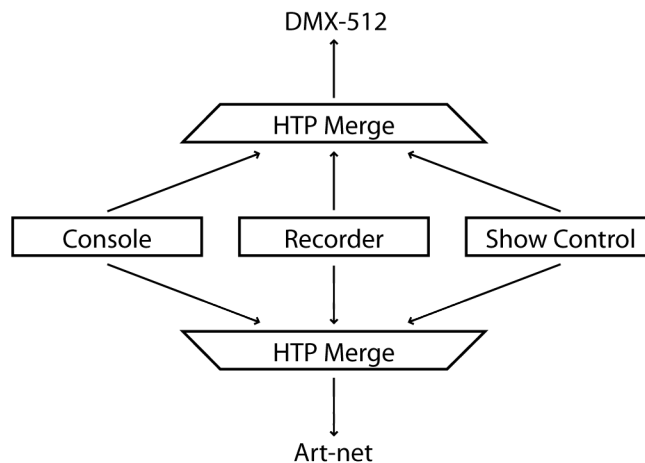

If more than one source is enabled per DMX or Art-net then the data of those sources is merged together via the Highest Takes Precedence (HTP) principle.

Art-Net

The Art-Net feature in the CueCore supports 2 universes out and 2 universes in. You can map each of those universes to any of the 256 available universes in the Art-Net protocol. This number is zero-based, ranging from 0 up to and including 255.

The broadcast messages sent out by Art-Net do put a certain load on the network, therefore it is recommended to disable Art-Net when not in use.

Art-Net transmission is switch off by default, it will be enabled automatically as soon as at least one Art-Net check-box is enabled in the Output Routing. Reception is permanently enabled for incoming Art-Net data and poll messages.

Date & Time

You can set the date and time of the Real-Time Clock (RTC) here. The clock is battery back-up in to keep the time during a power failure.

Daylight Saving Time (DST) is supported for the regions Europe and United States.

Location

The astronomical clock in the CueCore calculates the sunrise and sunset times based on day of the year, latitude, longitude and UTC values.

The latitude and longitude values define your position in the world and should be entered in degrees. The latitude value should be positive for North and negative for South, the longitude should positive for

East and negative for West. The website <http://www.findlatitudeandlongitude.com/> can help you find the latitude and longitude values for your location.

The time-zone and perhaps daylight saving time of your location is expressed in the UTC (Coordinated Universal Time) value. UTC is – in this context – equivalent to GMT (Greenwich Mean Time).

For example, Visual Productions' HQ is based in the city of Haarlem, the Netherlands. During the winter we are UTC +1 and in the summer during day light saving time we are UTC +2. So, our settings are:

DATE & TIME		LOCATION			
Date	2013-06-26	Latitude	52.2	degrees	
Time	09:18:15	Longitude	4.5	degrees	
Weekday	Wednesday	UTC	+1		
Daylight Saving Time	None	Sunrise	04:22	Offset	00:00 hh:mm
		Sunset	21:07	Offset	00:00 hh:mm

The Offset fields allows you to shift the sunrise and sunset triggers, both earlier and later. For example, to have a trigger half an hour before sunrise you set the offset to -00:30.

DMX INPUT

Only 50 channels are monitored on the DMX Input for triggering individual actions. You can specify here where that range starts, by default it starts at channel 1.

UDP

In this section you can set the port number on which the CueCore will listen out for UDP messages. The IP addresses and port numbers for outgoing UDP messages are set in the tasks at the Show Control page.

OSC

Set the port number on which the CueCore will listen for OSC messages in this section.

Also you need to fill in the addresses of the devices you would like to be receiving the OSC messages being sent out by the CueCore. In these IP Out fields you enter both IP address and port number; in the following syntax: “ipaddress:port”. E.g. to send OSC messages to your device at 192.168.1.99 and port number 7070, you would fill in: “192.168.1.99:7070”.


You can specify up to 4 addresses. Fill in “0.0.0.0:0” in each field you do not need to use.

IP

For setting up the IP address and sub-net mask of the CueCore. The 'Router' field is only required when doing Port Forwarding.

Time-code

The CueCore can receive a time-code signal to trigger Actions, synchronise the Recorder or to convert to other time-code protocols. It supports SMPTE, MTC, OSC and Art-net time-code signals, however, only one protocol can be selected at a time. It is also possible to select 'Internal' as the time-code source; in this case the internal timing logic of the CueCore is used. Please see the following diagram.

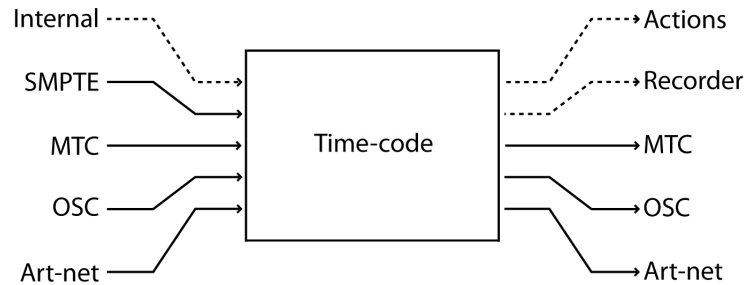

By enabling the time-code outputs for MTC, OSC or Art-Net you create a time-code converter, or when 'Internal' is selected as input source, a time-code master.

IoCore Web-Interface

The IoCore Web-Interface has the following pages.

Home

This page offers a status overview of all main properties and shows the values of the GPI and GPO ports.

The screenshot displays the IoCore web interface with a dark theme. At the top, there is a navigation bar with tabs for HOME, SHOW CONTROL, MONITORS, SETTINGS, and ABOUT. The URL www.visualproductions.nl is visible in the top right corner. The main content area is divided into several sections:

- GENERAL:** A table showing PCB serial number (201214002), PCB version (1.01), Firmware version (1.03), and Label (MyIoCore).
- NETWORK:** A table showing MAC address (00:50:C2:DE:90:8C), IP address (192.168.1.10), Subnet mask (255.255.255.0), and Router (192.168.1.1).
- GPI:** A table showing the status of 8 ports. Port 4 is at 100%, while all other ports (1, 2, 3, 5, 6, 7, 8) are at 0%.
- GPO:** A table showing the status of 8 ports, all of which are currently Off.
- RECEIVING:** A table showing the status of four protocols: DMX, Art-Net, OSC, and UDP, all of which are currently No.

At the bottom of the interface, a status bar displays: LABEL: MyIoCore GPI: 00000000 GPO: 00000000 RX: DMX ART OSC UDP RS232.

Show Control

The Show Control page is very similar to the Show Control page in the CueCore. Please refer to page 22 for a detailed description. Please note that some sources are only available in the CueCore and not in the IoCore (e.g. Scheduler, Timecode, Recorder).

The screenshot displays the 'IoCore' software interface, specifically the 'SHOW CONTROL' page. The interface is organized into several panels:

- SOURCES:** A list of available sources including Art-Net, System, OSC, UDP, and RS-232. An 'Add >>' button is located at the bottom.
- TEMPLATES:** A list of pre-defined templates such as 'Art-Net -> DMX', 'DMX -> Art-Net', 'DMX -> Outputs', 'Art-Net -> Outputs', 'Inputs -> DMX', 'Inputs -> Art-Net', and 'Inputs -> OSC'. An 'Add >>' button is at the bottom.
- ACTION LISTS:** A table with columns for 'ACTION LISTS' and 'ENABLED'. The 'Touch Screen' row is highlighted. A 'Remove' button is at the bottom.
- ACTIONS:** A list of outputs from Output 1 to Output 8. 'Up' and 'Down' buttons are on the right. 'Edit', 'Execute', 'Rename', and 'Remove' buttons are at the bottom.
- ACTION TYPES:** A list of action types including Button, Fader, Colour Picker 8, Colour Picker 16, Header 2, Header 3, and Clock. A '<< Add' button is at the bottom.

At the top, navigation tabs include HOME, SHOW CONTROL (selected), MONITORS, SETTINGS, and ABOUT. The URL 'www.visualproductions.nl' is in the top right. A status bar at the bottom shows: 'LABEL: MyIoCore GPI: 00000000 GPO: 00000000 RX: DMX ART OSC UDP RS232'.

The Show Control page is prepared with templates of operations that are very typical usage of the IoCore. The following tables describes those templates.

Art-Net → DMX	Converts incoming Art-Net to DMX. The DMX port needs to be set to output.
DMX → Art-Net	Converts incoming DMX to Art-Net. The DMX port needs to be set to input.
DMX → Outputs	Control the relays by DMX channel 1 through 8. Values below 50% switch the relay off, values above 50% will swich it on. The DMX port needs to be set to input.
Art-Net → Outputs	Control the GPOs by incoming Art-Net channel 1 through 8. Values below 50% switch the relay off, values above 50% will swich it on. The DMX port needs to be set to input.
Inputs → DMX	Convert the state of the GPI to DMX channels 1 through 8. When a GPI is to digital the DMX channel will switch between value 0 and 255, when set to analogue the channel will range between 0 and 255. The DMX port needs to be set to output.
Inputs → Art-Net	Convert the state of the GPI to Art-Net channels 1 through 8. When a GPI is to digital the Art-Net channel will switch between value 0 and 255, when set to analogue the channel will range between 0 and 255.
Inputs → OSC	Convert the state of the GPI to OSC. The OSC URI is /gpiX, where X is the GPI port number.
OSC → Outputs	Control the GPOs by incoming OSC messages. The OSC URI is /gpoX, where X is the GPO port number.
Demo	This demonstrates the capability of the IoCore by connecting the GPI's and GPO's to various protocols like DMX, OSC and VisualTouch.
Production Test	This template is used for testing the device during the production process.

Monitors

This page allows you to inspect the incoming and outgoing data.

loCore HOME SHOW CONTROL **MONITORS** SETTINGS ABOUT www.visualproductions.nl

DMX Art-Net In Art-Net Out OSC In OSC Out UDP In UDP Out RS232 In RS232 Out

1	2	3	4	5	6	7	8
000	000	000	000	000	000	000	000
9	10	11	12	13	14	15	16
000	000	000	000	000	000	000	000
17	18	19	20	21	22	23	24
000	000	000	000	000	000	000	000
25	26	27	28	29	30	31	32
000	000	000	000	000	000	000	000
33	34	35	36	37	38	39	40
000	000	000	000	000	000	000	000
41	42	43	44	45	46	47	48
000	000	000	000	000	000	000	000
49	50	51	52	53	54	55	56
000	000	000	000	000	000	000	000
57	58	59	60	61	62	63	64
000	000	000	000	000	000	000	000

UNIT %
Dec
PAGE Up
1
Down

■ LABEL: MyloCore GPI: 00000000 GPO: 00000000 RX: DMX ART OSC UDP RS232 MASTER

Settings

This page contains all the user settings.

General

You can change the loCore's label. This label can be used to distinguish the unit in a set-up with multiple devices.

The 'Blink' check-box will flash the device's LED to help to identify it amongst multiple devices.

DMX Port

Choose here to use the DMX port either as input or as output.

Art-Net

The Art-Net feature in the loCore supports 1 universes out and 1 universes in. You can map each of those universes to any of the 256 available universes in the Art-Net protocol. This number is zero-based, ranging from 0 up to and including 255.

The broadcast messages sent out by Art-Net do put a certain load on the network, therefore it is recommended to disable Art-Net when not in use.

Art-Net transmission can be switched on or off by the 'Enabled' check-box.

GPI

The GPI section signals measured by the input ports. It allows you to switch a port between Digital and Analog. When set to Analog you need to calibrate the input range so the IoCore knows the minimal and maximum voltage it can receive on that port. The IoCore supports any voltage inside the range of 0V and 10V.

Follow these steps to calibrate a port:

1. enable the 'Calibrate' button
2. apply the minimal voltage
3. apply the maximum voltage
4. disable the 'Calibrate' button

Caution: Applying a voltage >10V could damage the IoCore.

GPO

This section shows you the status of each relay and allows you to manually change it.

RS-232

This section gives you control of the RS-232 properties. Make sure these settings match the device you are communicating with.

UDP

In this section you can set the port number on which the CueCore will listen out for UDP messages. The IP addresses and port numbers for outgoing UDP messages are set in the tasks at the Show Control page.

OSC

Set the port number on which the CueCore will listen for OSC messages in this section.

Also you need to fill in the addresses of the devices you would like to be receiving the OSC messages being sent out by the CueCore. In these IP Out fields you enter both IP address and port number; in the following syntax: "ipaddress:port". E.g. to send OSC messages to your device at 192.168.1.99 and port number 7070, you would fill in: "192.168.1.99:7070".

You can specify up to 4 addresses. Fill in "0.0.0.0" in each field you do not need to use.

IP

For setting up the IP address and sub-net mask of the CueCore. The 'Router' field is only required when doing Port Forwarding.

Alphabetical Index

Action.....	25	MIDI.....	13
Action-list.....	25	Monitors.....	30
Actions.....	26	MTC.....	14
Art-Net.....	11	NAT.....	7
astronomical clock.....	32	Offset.....	33
backup.....	9	OSC.....	12
browser.....	15	Output Routing.....	32
Calibrate.....	40	PLAY.....	16
Capture.....	17	Playback.....	21
CLI.....	17	PoE.....	5
command line interface.....	17	Port Forwarding.....	33
compression.....	20	Port-Forwarding.....	7
Console.....	16	Power.....	5
Conversion.....	24	Real-Time Clock.....	29, 32
Cue.....	16	Recorder.....	20
CueluxPro.....	10	refresh rate.....	20
Date.....	32	reset.....	7
daylight saving time.....	33	RJ-45.....	12
Daylight Saving Time.....	32	Routing.....	22
DC.....	5	RS-232.....	14
DIN Rail.....	5	RTC.....	9, 32
DMX Splitter.....	11	Run Mode.....	16
DMX-512.....	11	Scheduling.....	28
Don't Care.....	29	Settings.....	31
EDIT mode.....	16	Show Control.....	23
fade time.....	17	SMPTE.....	13
firmware updates.....	8	Splitter.....	11
Flank.....	26	sub-net mask.....	6
forum.....	4	sunrise.....	32
GMT.....	33	sunset.....	32
GPI.....	12	Tasks.....	26
GPO.....	14	Templates.....	24
Groups.....	19	Time.....	32
Highest Takes Precedence.....	21	Time-code.....	22
hold time.....	17	time-zone.....	33
Home.....	15	TouchOSC.....	12
HTP.....	21	Trigger.....	26
IP address.....	6	trigger channel.....	21
iPhone.....	12	UDP.....	12
Kensington.....	5	Unit.....	16
latitude.....	32	UTC.....	33
link.....	18	VisualTouch.....	13, 24
Location.....	32	vManager.....	8
lock.....	5	VPN.....	7
longitude.....	32	web-interface.....	15
Loop.....	22	Weekday.....	29
Master.....	15	XLR.....	11
memories.....	20	23, 25, 31